



# Kirby Morgan Dive Systems, Inc.

1430 Jason Way, Santa Maria, CA 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.kirbymorgan.com Email: info@kirbymorgan.com

## 510-633

### SL-17 C Neck Dam, Medium -Large (Latex, Trimmed)

**Tools Needed:** Good Pair of Scissors


**Parts Needed:**

Part #	Description
510-634	SL-17 C Latex Neck Dam, Raw

#### Procedures:

**Note: Try to make cuts as smooth and as continuous as possible.**

1. Trim the neck seal part of the neck chute. Turn the neck dam inside out and cut just below the molded curve that goes on to the flat area. Try to cut as close to the flat area as possible with out having any of the flat area remaining.
2. Trim the mounting area. Trim along the top about 1/2" away from the molded edge leaving an area which the split rings can "snap into".

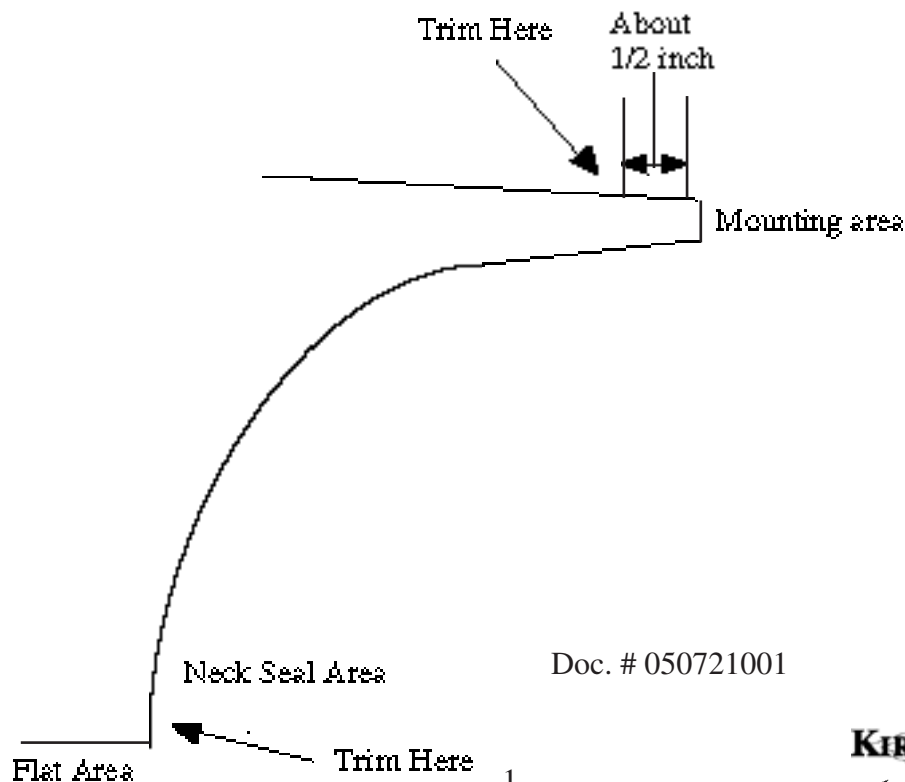

Doc. # 050721001

**KIRBY MORGAN**  
*Genuine Parts*