



# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmddsi@KirbyMorgan.com

## 505-094 Chin Strap Procedures

**Tools Needed:** Phillips screwdriver

P/N Qty:

**Parts Needed:** 505-111 1

530-031 2

### Procedures:


- 1) Remove old screws from snap located next to the chin cushion snap.

**Fig: 1 and 1A**

- 2) Put sealant in the holes. **Fig: 2**

- 3) Install P/N 505-111 Chin Strap using the new P/N 530-031 screws in place of old screws, and use the same snaps and washers. **Fig: 3**

- 4) The buckle should face to the right hand side of the helmet. **Fig: 4**

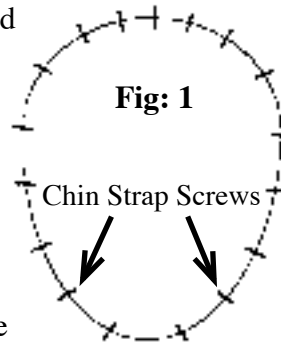

**Fig: 1**



**Fig: 1 A**



**Fig: 2**



**Fig: 3**



**Fig: 4**

### ⚠ CAUTION

Use only KMDSI original replacement parts. The use of other manufacturers' parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.