



# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

## Part #525-347 SL 17K & KM 37 Helmet Spares Kit

PART #	DESCRIPTION	QTY	PART #	DESCRIPTION	QTY
330-030	Screw	1	510-754	Head Cushion Assembly	1
330-035	Washer	1	510-683	Chin Cushion	1
510-008	O-ring	2	510-747	Oral Nasal Mask	1
510-010	O-ring	1	515-033	Communication Set	1
510-029	O-ring	1	525-309	Reg Rebuild Kit	1
510-260	O-ring	1	525-311	Side Block Kit	1
510-450	O-ring	1	525-745	Head Cushion Foam Spacer Kit (HCFS)	1
510-490	O-ring	1	525-759	Quad-Valve Exhaust Kit	1
510-550	Oral Nasal Valve	1	530-035	Screw	2
510-561	Valve, Water Dump, Black	1	530-045	Screw	1
510-575	Nose Block Pad	1	550-061	Whisker Spacer	2
510-628	Neck Dam	1			

### **\*See next page for O-ring Identification**

O-rings should be lightly lubricated with food grade silicone Dow Corning® 111 or equivalent in accordance with the operations and maintenance manual. Christo-Lube® may also be used. At a minimum, all helmet or BandMask® O-rings should be replaced at least once a year in accordance with the A2.1 checklist for the helmet or mask being inspected. During daily and monthly maintenance, O-rings and valves may be reused providing no damage or deformation is found. O-rings and valves may require replacement more often than yearly if the helmet or mask use is extreme, or if the helmet or mask is used in waters containing oil or chemical contamination. Daily cleaning and inspections as well as performing the monthly inspection (A2.2 checklist) will identify the need more accurately than simply placing a number of hours between overhaul. Store spare O-rings, valves and soft goods in a cool, dark, dry place. Avoid prolonged exposure to temperatures above 90 degrees Fahrenheit and/or exposure to ultra violet rays. Do not lubricate exhaust valves. Lubricating valves can cause dirt to stick, allowing leakage.

### **⚠ CAUTION**

**Use only KMDSI original replacement parts. The use of other manufacturers' parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.**



# Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342


www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com



**510-008**



**510-010**

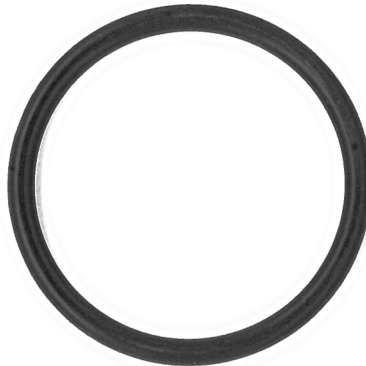

**510-029**



**510-490**

## **NOT SHOWN**

**510-260** 6.5" × 0.153"

1. Face Port O-ring

**510-450** 9" × 0.278"

1. Neck Ring O-ring

